


Video Eyewear Recorder

USER MANUAL

X130



PARTS ILLUSTRATION:

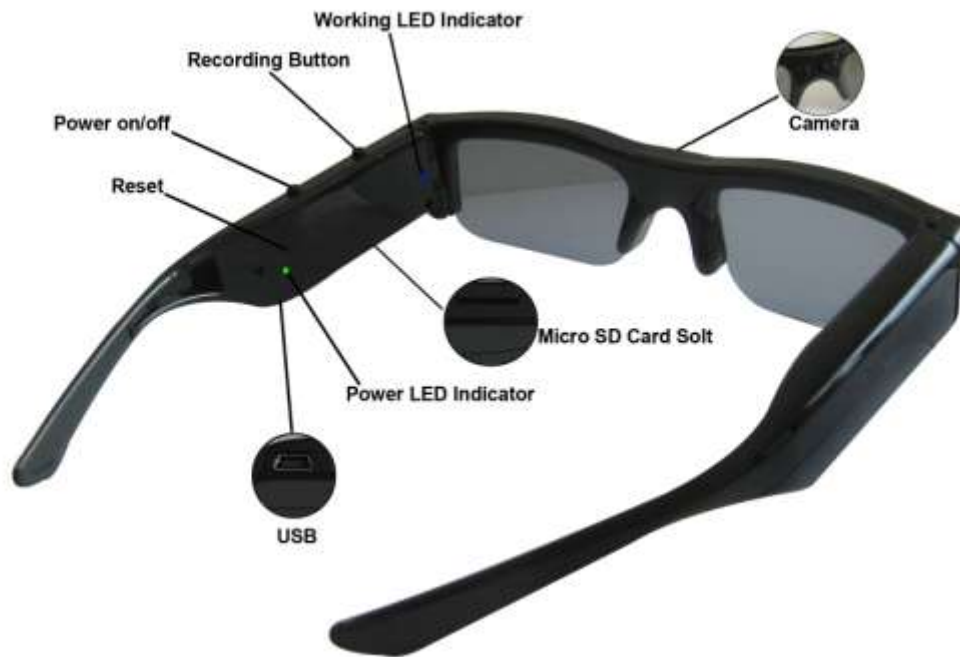

FEATURE:

1. Quality Polaroid Lens from brand makers.
2. 1.3 mega pixels pinhole CMOS camera for clear digital recording.
3. Built in 2G memory for approx 5 hours video recording, still video length can be varied from 3-20 hours under different lux or light condition.
4. With extended memory slot for TF/Micro SD card.
5. Easy connection with PC/Laptops, no driver needed.
6. Sleek and elegant design suits for both men and women users.
7. User friendly operation button for easy control.
8. Real time recording, never let memorable moments sneak away from life.
9. A must equipment highly recommended for journalists, traffic police, travelers and students.

OPERATION:

A) Switch On

To start the device, please press the On/Off button for 4-5 seconds till the green and blue LED lights on, device is then started. When the blue LED goes off in second, it gets ready for recording now.

B) Switch Off

Press the On/off button for about 4-5 seconds will switch off the device manually, or leave the device without operation for 20 seconds, it will shut off automatically.

C) Recording

1. Start to record

In power on mode, one short press of recording button, it will start recording. Blue LED lights will blink to show that device is working properly. This lights can also be noticed by your peripheral vision when glasses worn on nose.

2. Stop and Save

One short press of the recording button, device will stop recording and you will see the blue LED lights on and remain illuminated for a few seconds, now the devices are saving data to its in-built memory. When blue lights goes off, data saving finished and device is ready for next recording.

3. Auto shut-off

If you leave the device without operation for 20 seconds, it will automatically shut off for power saving. You need to restart it again if you want to do new recording.

STORAGE:

- A) The device has a standard in-built 2GB memory.
- B) Device also offers micro SD card slot for extended memory.
- C) Under default saving mode, if micro SD card inserted, data will be saved into micro SD card first, when it's full, data will be saved into the in-built flash memory.
- D) When space is full, LED light will stop blinking and start data saving; If in-built memory is full, device will shut off after data saving.

- E) You are kindly requested to insert and pull out the Micro SD card in power off mode to avoid data loss or damages to the device or Micro SD card.
- F) Please format Micro SD card before using.

BATTERY:

- A) If failed to start the device, in most cases the battery is flat and needs to be recharged. For initial three charges, you are kindly requested to charge the li-polymer battery for at least 12 hours long to ensure its best performance in future. Please do not charge it for over 24 hours.
- B) You can either charge the battery using USB cable or charge it thru AC adaptor provided. Usually a full charge requests 3-4 hours.
- C) The red LED lights will turn on when starts recharging and will turn off when battery is fully charged.
- D) Please do not use other AC adaptors other than the one provided in the standard kit to avoid damages to the product.
- E) If you haven't use the device for a long period of time, we suggest you to recharge the battery first before use it.
- F) Better charge the battery in power-off mode for fast recharge and best product protection.

PC/LAPTOP CONNECTION:

A) System Requirement

1. CPU must be at least 100Mhz above
2. Operating system: Win 98/Me/2000/XP/Vista
3. USB slot
4. CD-Rom/DVD Rom
5. Minimum 15MB free harddisk space
6. Minimum 32MB momory

B) Connecting PC or Laptop

1. Start the device, plug the USB to it and then connect to PC or Laptop.
2. The computer will recognize the newly added disk and shall install if necessary the driver.

3. After installation, a new window will popup, and you are able to see a folder namely “Video” with the video files you have just recorded ready for downloading to local disk.
4. You can then copy or cut and save to your local hard drive.
5. When finished, click to remove the storage disk.

SPECS:



Product Size	150*50*38mm (folded)
Physical weight	39g
Speed	Read > 700kbs, write > 500kbs
USB	1.1
Power supply	Embedded 550mAh Li-polymer Battery
Power duration	4-5 hours
Power Adaptor	5V DC/ 500mAh
Power Consumption	<0.4W
Memory	In-Built 2GB , Support TF/Micro SD Card, Max 2GB
Resolution	320*240
Video Format	3GP
Audio	Stereo
Lens specs	1.3 mega pixels pinhole CMOS camera
Recording Speed	30fps
Working temp	0 C – 60 C
Storage temp	-20 C - 80 C
Player	Quicktime, Real player, Storm codec
Menu Language	English
Operating System:	Win98 , WinMe, WinXP, Win2000, Windows Vista

TROUBLE SHOOTINGS:



Symptom	Possible reason	Solution
Fail to start	Flat battery,	Recharge battery
	device jam	Reset, then start again
Auto shut-off	Flat battery	Recharge battery
Cannot recognize when connect to PC/Laptop	Connect to pc when power off	Connect to pc when device on
	USB Cable failure	Replace new cable
	PC Bios disabled	Set USB enabled
	Main board does not support USB port	Update mainboard driver
	PC system Jam	Reboot PC
Data not saving	Memory is full	Delete unwanted files
Power auto off after start	Battery power shortage	Recharge
	Memory is full	Delete unwanted files