

高清摄像眼镜

X系列



时尚近视镜设计
带太阳镜可选镜片



用户说明书

请在使用前认真阅读本说明书

5m
pixels

4GB
Memory

MOBILE
DV

AVI

 
720P HD

HD Camera Eyewear

X SERIES



Fashion Prescription design
with sunglasses lens option

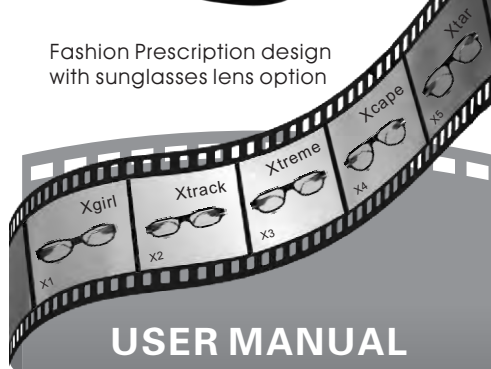

USER MANUAL

KINDLY READ THRU THIS MANUAL BEFORE ANY OPERATION

5m
pixels

4GB
Memory

MOBILE
DV

AVI

720P HD

配件



 
数码眼镜摄像机



眼镜包



用户说明书



眼镜布



充电器(可选配件)



USB线



太阳镜片(可选配件)

ACCESSORIES



 
Camera eyewear



Carry Case



User manual



Cleaning Cloth



AC adapter(optional)



USB cable



Sunglasses lens(optional)

产品图解



PARTS ILLUSTRATION



功能特点

1. 世界首款高清数字摄像眼镜。
2. 色彩鲜艳，图像逼真，效果自然纯真。
3. 设计灵活多样适合不同脸型需要及不同品位追求。
4. 时尚酷炫设计紧跟潮流脚步。
5. 完美融合多项时尚概念及流行元素，更有为潮流达人专门设计的限量专版来满足个性品质需求。
6. 5百万像素CMOS摄像头。
7. 免费赠送4G 海量存储空间，并可根据客户需要进行扩容。
8. 直接可以通过USB连接电脑，无须任何驱动程序。
9. 用户友好操作按键，一键式影音录制存储全搞定。
10. 实时摄像功能，记录美好生活点点滴滴。
11. 是时尚达人，记者，交警，狩猎者，野外训练，爬山，生物动物学家，学生，旅行者不可或缺之必备品。

基本操作

A. 时间设置

1. 连接机器到电脑进入U盘模式
2. 在根目录下新建一个文本文件命名为 “time.txt”
3. 打开文本文件，按照以下格式输入时间:2010. 10. 10
10:10:10 (年年年年. 月月. 日日 时时:分分:秒秒)。
4. 结尾加空格 Y表示显示时间，加空格N 表示不显示。
5. 关闭文件，然后安全移除即可。

B. 开机

按住开关键2秒然后松手，红灯亮，机器初始化大约5秒钟后自动进入录像状态，蓝色LED灯 开始闪烁表明机器正在工作。

C. 关机

开机状态下再次短按开关键按钮即可将机器关闭，同时文件将保存在记忆卡内。

D. 自动关机

电池低或文件写满时，红蓝灯交替闪烁30秒即自动关机。

FEATURE

1. World's first HD quality video camera eyewear.
2. Brilliant and rich natural colors, high quality video images.
3. Flexible design suits for different faces for different races and ages.
4. Fashion and cool design keeps up closely with vogue steps.
5. A perfect embrace of fashion concepts and factors, Limited Editions available for picky trend-spotter.
6. 5 mega pixels CMOS camera for clear digital video recording.
7. 4G complimentary TF card memory.
8. Easy connection with PC/Laptops, no driver needed.
9. User friendly operation button for easy control.
10. Real time recording, never let memorable moments sneak away from life.
11. A must for trend-spotter, journalist, traffic police, travelers, hikers, mount climbers, students, life-lovers and etc.

OPERATION

A) Time Setup

1. Connect device to PC or Laptop, it will be recognized as a newly added storage drive.
2. Click to open the newly added drive.
3. Right click your mouse and create a new text file under the root directory. Make sure NOT to create it under "video" folder.
4. Rename the new text file as "time.txt".
5. Open the new text file, input the local real time as per the sample below:
If present time is local time: 10:10:10, 10th, Oct, 2010, then input time this way. 2010.10.10 10:10:10 Y/N (YYYY/MM/DD HH/MM/SS Y/N)
6. You can add space Y after the time to enable time stamp on the video or input space N to disable it.
7. Save it and then exit
8. Time is set and ready for new recording.

B) Switch On

To start the device, press and hold the On/Off button for two seconds and then release, RED LED indicator will light up, device is then started and will take approx 5 seconds to start recording automatically, BLUE led light start blinking to show that device is working.

C) Switch Off

One short press of the On/off button will switch off the device, and files will be saved automatically.

电脑连接

A) 系统最低配置要求

1. CPU 必须最少要500Mhz 以上。
2. 操作系统: Win2000/XP/Vista/Win7
3. USB 端口
4. CD-Rom/DVD Rom
5. 最少1GB 的硬盘空间
6. 最少512MB 的内存

B) 连接电脑或笔记本电脑

1. U 盘模式

- A. 关机状态下, 将机器一端接上USB线, 然后另一端插入电脑USB 端口。
- B. 电脑会自动识别新的磁盘并安装需要的驱动。
- C. 驱动安装完后, 会自动弹出一个窗口, 里面有一个“VIDEO”的文件夹, 打开这个文件夹, 进去之后有一个子文件夹100VIDEO, 这个就是存放录影数据的文件夹。你同样可以在电脑根目录下找到这个新添加的磁盘并打开它。
- D. 可以点击复制, 剪切已摄录的影像资料, 然后粘贴至本地文件夹或者直接拖动至本地电脑文件夹即可。
- E. 保存完成后, 可以点击USB设备, 安全删除退出即可。

2. 网络摄像头模式

- A. 在U 盘模式下, 单击 PC Camera Drivers 文件夹打开。
- B. 选择文件STK03H.EXE 运行然后安装驱动程序到你的电脑。
- C. 安装完成后, 安全退出, 拔掉机器。
- D. 开机, 然后重新插上USB。
- E. 电脑会自动搜索并完成安装。
- F. 运行桌面的AMCAP.EXE 即可 (如未见, 在U盘模式下, 从驱动文件夹里拷贝该文件至桌面即可)。
- G. 如果电脑里已经有一个预装或内置的摄像头, 需要先禁用该摄像头才能使用本设备作为网络摄像头。

D) Auto shut-off

When battery is low or memory is full, Red and blue LED lights will blink by turn for approx 30 seconds, device will save the files and then shut off itself.

PC/LAPTOP CONNECTION

A) System Requirement

1. CPU must be at least 500Mhz above
2. Operating system: Win2000/XP/Vista/Win7
3. USB slot
4. Minimum 1GB free hard disk space
5. Minimum 512MB memory

B) Connecting PC or Laptop

1. USB Storage mode

- a. When device is under "OFF" status.
- b. Connect the device to PC or Laptop thru USB port using USB cable provided in the kit.
- c. The computer will recognize it as a newly added disk and shall install if necessary the driver.
- d. After installation, a new window will popup, click "Open to check files" and go to the folder that video stored in, namely "Video", (you can also find the device as a removable disk under your Computer root directory), click the folder to enter, then you see a sub folder namely "100VIDEO", click again to enter, you are able to find the video files that has been recorded stored under this folder and are ready for downloading to local disk.
- e. You can then copy or cut and save to your local hard drive.
- f. When finished, click to remove the storage disk safely.

2. PC camera

- a. Under USB storage mode, click the folder namely "PC camera drivers" under root directory and enter.
- b. Select the PC camera program "STK03H.exe" and install it to your computer.
- c. After installation, unplug the device and remove it from computer.
- d. Start the device, then connect it again to the computer.
- e. Computer will search the drivers and install the camera.
- f. After installation, run program AMCAP.exe on your desktop (if not see, copy the file from the same driver folder under USB storage mode) .
- g. You are able to use the device as the PC camera now
- h. If in case that your computer has another camera preinstalled or embedded, then disable that first before you can use this device as a PC camera..

电源充电

1. 如开机时机器未启动，通常情况下电池处于无电状态，这个时候需要先对电池进行充电。为保证达到电池的最佳使用状态和更长的寿命，前三次新电池充电时我们强烈建议充电至少8-12小时，但切记不宜超过24小时。
2. 您可以使用随机配送的USB线来通过电脑对机器充电，也可以使用随机附赠的电源接上USB直接充电，通常一次满充需要约3小时的时间。
3. 充电时红色LED灯闪烁，当充满时，红灯长亮。
4. 随本机附赠的电源为特别订制的电源，请勿使用其他不合格规格的电源，以免对机器造成损伤。
5. 如长时间未使用本机，使用前，请充电。
6. 在关机状态下充电对电池能起到很好的保护，可以延长电池的使用寿命。

产品参数

产品折叠尺寸	160*140*40mm
实际重量	大约35g
读写速度	1.5MBps-60MBps
USB	2.0高速
电池	内置280mAh 聚合物锂电池
摄录时间	1-2 小时
电源	5V DC/ 500毫安时
设备功率	<0.8W
记忆体	内置4GB内存，有TF卡槽可扩容
解析度	1280*720
视频格式	AVI
音频属性	立体声
镜头参数	500万CMOS摄像头
摄录速度	最大30帧/秒
工作温度	0℃ - 60℃
储存温度	-20℃ - 80℃
播放软件	苹果播放器，Real 播放器，暴风影音
说明书语言	汉语/英语
操作系统	WinXP, Win2000, Windows Vista, Win7

Power Supply

- A) If failed to start the device, in most cases the battery is flat and needs to be recharged. For initial three charges, you are kindly requested to charge the battery for at least 8-12 hours long to ensure its best performance in future. Please do not charge it for over 12 hours.
- B) You can either charge the battery using USB cable or charge it thru USB AC adaptor. Usually a full charge takes approx 3 hours.
- C) The RED LED lights will start blinking when recharging started and will stop blinking and remain lighted when battery is fully charged.
- D) Please do not use other AC adaptors other than the one provided in the standard kit to avoid damages to the product.
- E) If you haven't use the device for a long period of time, we suggest you to recharge the battery first before use it.
- F) Better charge the battery in power-off mode for fast recharge and best product protection.

SPECIFICATION

Product size	160*140*40mm (folded)
Physical weight	Approx 35g
Read/write speed	1.5MBps-60MBps
USB	2.0 (High Speed)
Power supply	Embedded 280mAh Li-polymer Battery
Power duration	1-2 hours
Power adaptor	5V DC/ 500mAh
Power consumption	<0.8W
Memory	4GB complimentary TF Card, Max 32GB
Resolution	1280*720
Video format	AVI
Audio	Stereo
Lens specs	5 mega pixels CMOS camera
Recording speed	Max 30fps
Working temp	0℃ - 60℃
Storage temp	-20℃ - 80℃
Player	Windows Media Player, Real player, Storm codec
Menu Language	English/Chinese
Operating System	WinXP, Win2000, Windows Vista, Win7

存储说明

1. 机器标配内置4GB记忆体。可根据客户要求订制。
2. 当记忆体存满时，LED灯灭并保存数据，机器在保存数据后会自动关闭。

故障诊断

故障现象	可能原因	解决办法
不能开机	电池没电	充电
	机器死机	按重启，恢复出厂设置
自动关机	电池没电	充电
	记忆体满	删除不必要的文件
连接电脑后不能识别USB	关机状况下连接电脑	需要开机情况下连接
	USB 线故障	重新更换USB线
	PC Bios设置屏蔽USB端口	激活USB端口
	主板不支持USB设备	更新驱动程序
	电脑死机	重新启动电脑
数据不能保存	记忆体满	删除不必要的文件
开机后自动关机	电池少电	充电
	记忆体满	删除不必要的文件
	无卡	装卡

STORAGE

- A) The device has in-built memory of 4GB. custom requests for different capacity are available at customer's demand.
- B) When space is full, device will start data saving and then shut off after.

TROUBLE SHOOTING

Symptom	Possible reason	Solution
Fail to start	Flat battery	Recharge battery
	Device jam	Reset, then start again
Auto shut-off	Flat battery	Recharge battery
	Memory is full	Remove files from memory
Cannot recognize when connect to PC/Laptop	Connect to PC when power off	Connect to PC when device on
	USB Cable failure	Replace new cable
	PC Bios disabled	Set USB enabled
	Main board does not support USB port	Update mainboard driver
	PC system Jam	Reboot PC
Data not saving	Memory is full	Delete unwanted files
Power auto off after start	Battery power shortage	Recharge
	Memory is full	Delete unwanted files
	No TF card loaded	Load TF card

免责声明

请用户在摄录完毕后及时对摄录资料进行保存，本公司对于因软件故障、硬件误操作、产品维修或者其他意外情况引起的个人数据资料丢失和损坏不负任何责任，也不对由此造成的其它间接损失承担责任。同时我们也无法控制用户对本手册阐明的产品使用功能和用途产生误解或者有侵犯隐私权或者法律的任何行为，因此本公司不对任何因为使用本品而造成的诸如隐私权或者法律的纠纷而承担任何责任，也不对因使用本产品而引起的第三方索赔负责。

申明

本公司有在不事先通知的情况下对产品进行改进和升级的权利，具体升级及改进内容可通过本司网站或者销售人员进行了解。通常公司会预留一定过渡期给每个尊贵的客人，但若因无法照顾到所有人而产生的不便，敬请谅解。

该说明书涉及的产品外观设计，功能参数以及配置等均受到相关法律及知识产权的保护，任何未经授权的拷贝、复制以及生产均视为违法并将受到相应的法律制裁，我司保有对违反者起诉和要求损害赔偿的权利。

DISCLAIMER

User are kindly requested to backup safely the recorded files after using this device. We undertake no responsibility for any direct or indirect losses or damages occurred to the files or datas stored in the memory due to the malfunction of the software and or hardware, product repair or any other unexpected events similar to but not limited to the listed. Also we are not responsible for any individual acts or deeds that violate law or others privacy due to the misinterpretation of this manual and or usage of this device, nor are we responsible for any third party claim due to the usage of this device.

ANNOUNCEMENT

This Company preserve the rights to upgrade or ameliorate the product without any prior notice, the content of which can be obtained from our website notice or salesperson. Normally we leave a transitional period for our esteemed customers, to pass through smoothly, however, we cannot guarantee to inform everybody timely, if in such case any inconveniences occurs, your kind understanding are highly appreciated.

The product design, configuration and or specification mentioned here in this manual are protected by pertinent copyrights and patent laws. Any unauthorized copy or reproduction are strictly prohibited and trespassers will be prosecuted. We reserve the rights to claim further for any direct or indirect losses incurred.